

Troubleshooting: Caliper Piston Sticking

Problem

Brake pad noise, excessive pad wear



Likely Cause

- Caliper piston is sticking
- Caliper piston is rusted due to water and corrosive chemicals exposure
- Caliper piston seal is damaged due to heat and friction

Solutions

- Check piston for rust and replace if necessary
- Check piston seal for damage, replace if necessary
- Apply rubber grease on a piston seal