

Troubleshooting: Brake Pressure Loss

Problem

Brake pedal is sinking regularly when brakes are applied



Likely Cause

- Pressure loss due to cylinder piston seal failure

Solutions

- Replace the brake master cylinder