

Troubleshooting: Caliper Slide Pin Sticking

Problem

Brake pad noise, excessive pad wear



Likely Cause

- Caliper slide pin is sticking
- Slide pin is rusted due to running out of grease
- Slide pin boot and sleeve are damaged due to heat and friction

Solutions

- Check slide pin for rust and replace if necessary
- Apply anti-rust grease on a slide pin
- Check slide pin boot and sleeve for damage, replace if necessary
- Apply rubber grease on slide pin boot and sleeve