

## Troubleshooting: Brake Pad Uneven or Premature Wear

### Problem

Brake pad uneven or premature wear



### Likely Cause

- Caliper piston is sticking
- Caliper slide pin is sticking (floating calipers)

### Solutions

- Check caliper piston is retracting properly
- Check piston seal for damage and piston for rust
- Replace a seal for damage and piston for rust
- Check if caliper slide pin is retracting properly
- Check slide pin boot for damage and slide pin for rust
- Replace a slide pin and slide pin boot if necessary